




www.prolight.co.uk

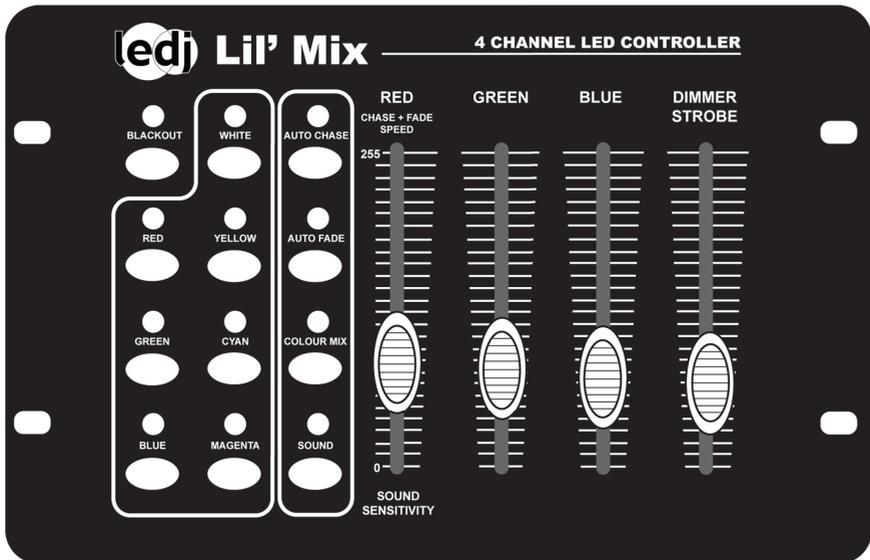

Lil' Mix Controller

(Order code: LEDJ122)

USER MANUAL

WARNING

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**



CAUTION!

**Keep this equipment away from rain,
moisture and liquids.**



SAFETY INSTRUCTIONS

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



**CAUTION! TAKE CARE USING THIS EQUIPMENT!
HIGH VOLTAGE-RISK OF ELECTRIC SHOCK!!**



Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately.
Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.

OPERATING DETERMINATIONS


If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.


Do not endanger your own safety and the safety of others!
Incorrect installation or use can cause serious damage to people and property.

Over view:

Front:

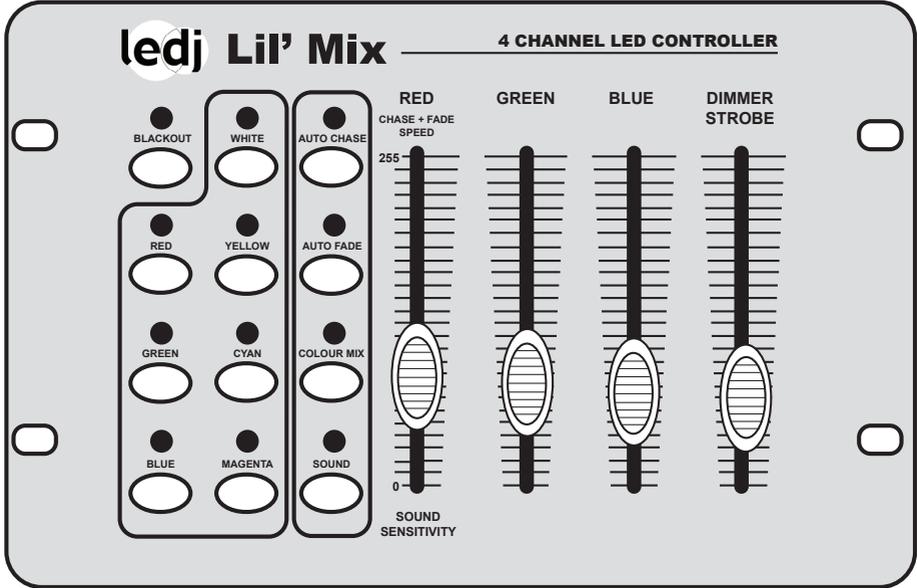

Rear:

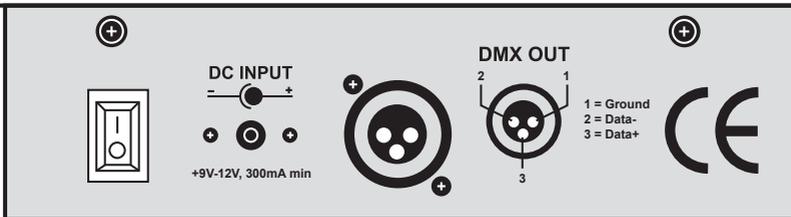

Features:

For use with LEDJ 4 channel fixtures.

7 different hold colour buttons for instant colour selection, each colour with dimming control.

3 different buttons for Auto Chase, Auto Fade and Colour Mix. Each mode with speed control.

Sound active function with adjustable sensitivity.

Blackout & Strobe functions.

Operation:

When you power up your Lil' Mix, it will show "**BLACKOUT**" mode.

You are now ready to select any of the following modes of operation.

1, Colour Selection mode

In this mode you can select the colour using one of the seven presets, you must use the "**DIMMER/STROBE**" slider to set the desired brightness or strobe speed.

2, Sound Active mode

In this mode you can have a seven colour chase activated by the internal microphone. You will need to adjust the "**SOUND SENSITIVITY**" slider to set the music input sensitivity level. You can then use the "**DIMMER/STROBE**" slider to set the desired brightness and strobe speed.

3, Colour Mix mode

In this mode you can create almost any colour by using the "**RED**", "**GREEN**" and "**BLUE**" sliders. You can then use the "**DIMMER/STROBE**" slider to set the desired brightness or strobe speed.

4, Auto Fade mode

In this mode the fade speed can be set by using the "**RED**" slider, you can also use the "**DIMMER/STROBE**" slider in this mode.

5, Auto Chase mode

In this mode the chase speed can be set by using the "**RED**" slider, you can also use the "**DIMMER/STROBE**" slider in this mode.

Specifications

Power supply: DC 9V 300mA Min.

Size: 210 x 134 x 54 mm

Weight: 1.0 Kgs